

IMPORTANT CUSTOMER NOTICE

The treadmill console features a “demo” mode designed to be used if the treadmill is displayed in a store. (For information about the demo mode, see THE INFORMATION MODE in your user’s manual.)

If the demo mode is turned on, the console displays will light as soon as you plug in the power cord and switch the circuit breaker to the reset position, before you insert the key.

To turn off the demo mode, hold down the STOP button, insert the key, and then release the STOP button. A “d” will appear in one of the displays, indicating that the demo mode is turned on. Press the speed decrease button to turn off the demo mode. Then, remove the key.

Part No. 2XXXXXX R0307A Printed in USA © 2007 ICON IP, Inc.

IMPORTANT CUSTOMER NOTICE

The treadmill console features a “demo” mode designed to be used if the treadmill is displayed in a store. (For information about the demo mode, see THE INFORMATION MODE in your user’s manual.)

If the demo mode is turned on, the console displays will light as soon as you plug in the power cord and switch the circuit breaker to the reset position, before you insert the key.

To turn off the demo mode, hold down the STOP button, insert the key, and then release the STOP button. A “d” will appear in one of the displays, indicating that the demo mode is turned on. Press the speed decrease button to turn off the demo mode. Then, remove the key.

Part No. 2XXXXXX R0307A Printed in USA © 2007 ICON IP, Inc.